



R 6021 shown on F 8505

www.ppd1.biz

| no. | description | part no. | R 6021 F 8505 | R 6022 F 8500 |
|-----|---------------------------------------|----------|------------------|------------------|
| 1 | Stop Body | 34711-08 | | |
| 2 | Seat Washer Screw | 159-17 | | |
| 3 | Seat Washer | 441-07 | | |
| 4 | Stem w/washer & Screw | 19422-08 | | |
| 5 | Cap Washer | 125-07 | | |
| 6 | Stuffing Box Cap | 21423-08 | | |
| 7 | Packing | 1311-07 | | |
| 8 | Stuffing Nut | 25015-07 | | |
| 9 | Supply Tube to Valve | 1750-07 | | |
| 10 | Valve Body | 25381-04 | | |
| 11 | Lock Nut | 24526-08 | | |
| 12 | Friction Washer | 20829-09 | | |
| 13 | Flange | 68040-02 | | |
| 14 | Sleeve | 21376-08 | | |
| 15 | Seat Washer | 1171-27 | | |
| 16 | Stem w/washer & Screw | 25688-08 | | |
| 17 | Spring | 1188-07 | | |
| 18 | Gland | 33898-08 | | |
| 19 | Spacer | 40394-08 | | |
| 20 | Stem Packing | 129-07 | | |
| 21 | Cap Washer | 1044-07 | | |
| 22 | Cap | 364-12 | | |
| 23 | Cam | 171-37 | | |
| 24 | Ball Race | 527-17 | | |
| 25 | Handle | 92-22 | | |
| 26 | Friction Washer | 21771-08 | | |
| 27 | Pin | 433-07 | | |
| 28 | Handle Nut | 1150-07 | | |
| 29 | Handle Cap | 1312-32 | | |
| 30 | Supply Tube to Spreader | 1789-07 | | |
| 31 | Adapter Elbow | 1782-07 | | |
| 32 | Supply Ell for Spreader | 25678-08 | | |
| 33 | Static Seal | 27-37 | | |
| 34 | Washer | 67-07 | | |
| 35 | Spreader Body | 25677-02 | | |
| 36 | Adjusting Plate w/link S/A | 13008-02 | | |
| 37 | Spring | 46-17 | | |
| 38 | Washer | 1206-07 | | |
| 39 | Adjusting Nut | 32597-02 | | |
| 40 | Supply Tube to Spreader | 1780-07 | | |
| 41 | Supply Tube to Valve | 1760-07 | | |
| 42 | Spreader S/A - (Parts 26, 32 thru 39) | 7456-02 | | |
| 43 | Self-closing Valve S/A | 7453-02 | | |
| 44 | Stop S/A - (Parts 1 thru 8) | 7479-08 | | |

Note - Access Plate (not illustrated) - #1376-29 for R 6021
Access Plate (not illustrated) - #760-29 for R 6022

